


CONCEPT AIR

QUICK START GUIDE


WHAT IS IN THE BOX?

Power Unit (Blower), Battery, Battery Charger, Hose, Headpiece.


Charge battery fully before use

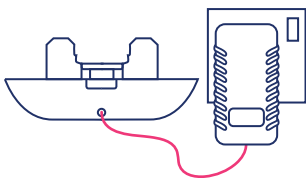

Attach battery to the blower and click into place at front and rear.

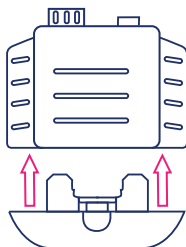


Ensure main filter and pre-filter (optional) are fitted to the blower.

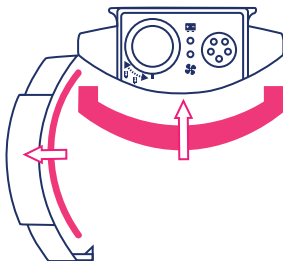


CENTURION®
WHEN CLARITY COUNTS


Attach hose to blower unit and lock in place by rotating sleeve into the lock position.

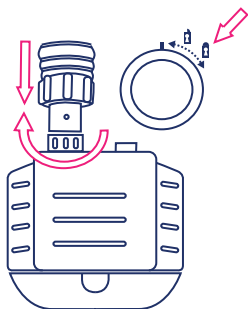


Attach the hose to the headpiece by pushing and rotating hose until it locks in position.

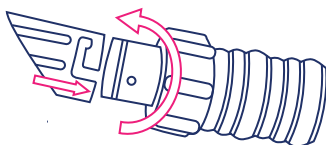

To switch the unit on or off, push here

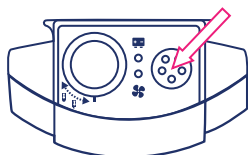

If the audible alarm sounds, the power unit will indicate whether the filter needs replacing (yellow LED) or the battery needs charging (red LED).

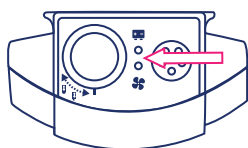

This Quick Start Guide gives you basic information on how to prepare and use the ConceptAir Powered Respirator system.

Please take the time to read the two full instruction leaflets supplied with the system, which includes details of replacement filters, spare parts and system guarantee.